


Eclipse & Aurora Mounting Options


Base and Installation Options




Spigot included

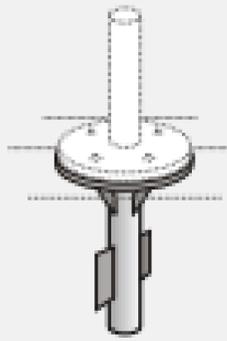

In Ground Fitting - to be concreted into ground


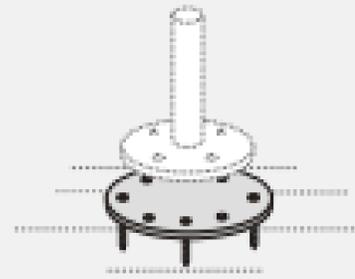


Base Plate 315mm ϕ - to bolt to concrete patio or wooden deck


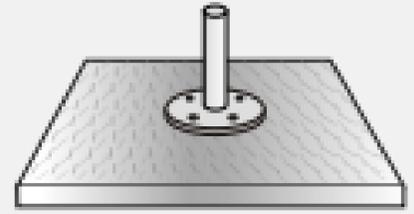


Heavy Weighted Base with Aluminium Cover

Base Plate Installation

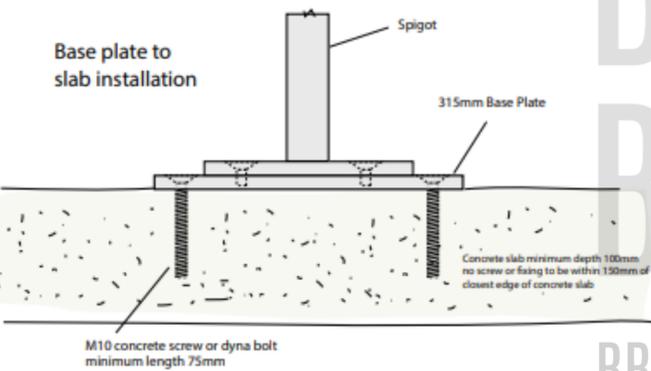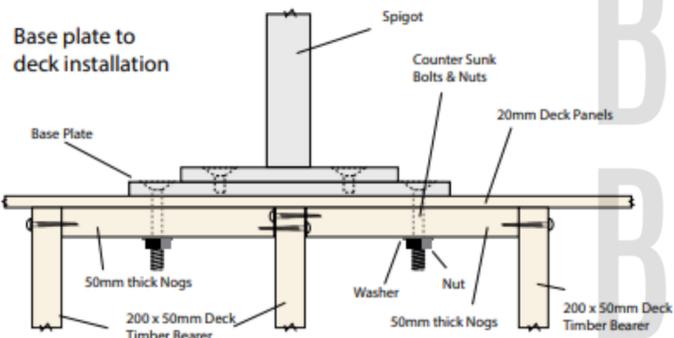

In-Ground Installation

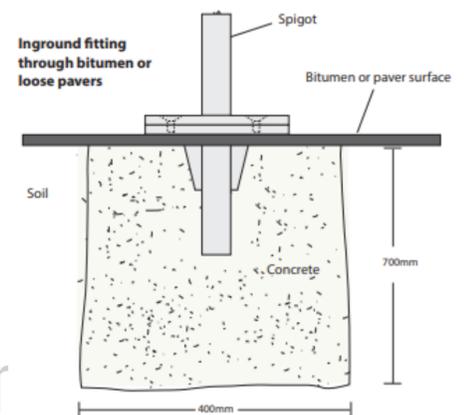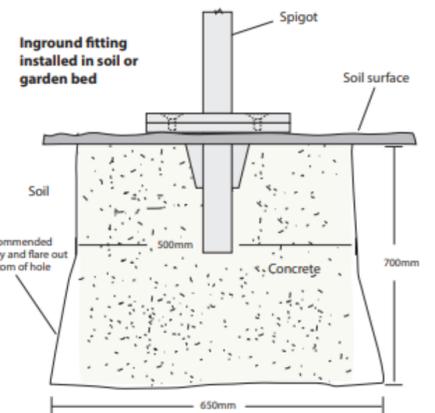

INSTANT SHADE UMBRELLAS

UMBRELLA IN-GROUND SOCKET AND SLEEVE

Two sizes available:
To suit 40mm post
To suit 50mm post

Top piece > (Adapter)

Double locking screws (To hold umbrellas in place securely)

Ground level

Bottom piece > (Inground sleeve)

300 mm

Stainless steel top plate (Spring-loaded closing lid)

In Ground Sleeve-Mounted under decking

Make sure that the beam is larger enough to support the sleeve.
If you have any concerns please speak to a builder.